


## Lubrication Points on a Monaco Executive

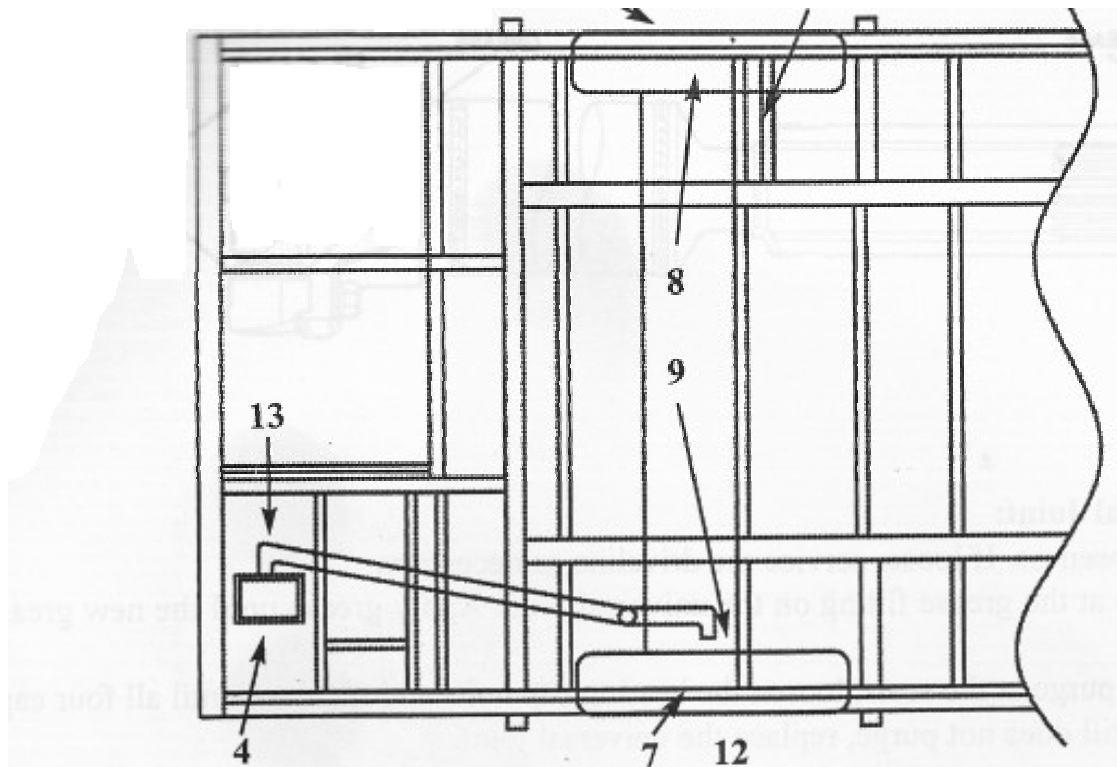

## LUBRICATION

Service must be performed every twelve (12) months regardless of actual mileage, to protect seals, bearings and gaskets from drying out and failing. The motorhome must be started and driven for at least 20 miles bimonthly.

### Chart on Next Page

1. Engine Oil	Keep To Full Mark	Check Daily	EO
2. Engine Oil Filter	Replace At Oil Change	Refer to Cummins	OP
3. Transmission	Refer To Service Manual	Check Daily	TF
4. Steering Shaft	3 Fittings	30,000 or Annually	CL-4
5. Drive Shaft U-Joints	2 Fittings	10,000 or Annually	CL
6. Drive Shaft Slip Joint	1 Fitting	10,000 or Annually	CL
7. Wheel Bearings	Repack	30,000 or Annually	HT
8. Brake Cam Shaft	One Fitting Each Wheel	30,000 or Annually	CL
9. Brake Adjuster	One Fitting Each Wheel	30,000 or Annually	CL
10. Battery Terminals	Apply Coating	10,000 or Annually	P
11. Rear Axle Differential	To Filler Plug	100,000 or 3 Years	MP
12. King Pins & Knuckles	2 Fitting Each End	30,000 or Annually	CL
13. Drag Link/Tie Rod	4 Fittings	30,000 or Annually	CL
14. Hydraulic Fluid Reservoir	Keep To Full	Check Daily	TF
15. Hydraulic Fluid Filter (if applicable)	Replace	15,000 or Annually	TF
16. Fuel Filter	Replace	At oil change	FF
17. Engine Coolant Capacity	Replace	Every 2 Years	AF

Approx. 12 gal.